


# DIPLOMAT EASE

## Mount Instructions


### TOOLS NEEDED:



### BRACKETS

**EN:** The brackets should be placed approximately 150mm from the edges of the case.  
If there is three brackets included (only larger screens) the third should be placed in the middle.

**SE:** Konsolerna ska placeras cirka 150mm från kanterna på kassetten.  
Om det ingår tre konsoler (endast större filmdukar) ska den tredje placeras i mitten.

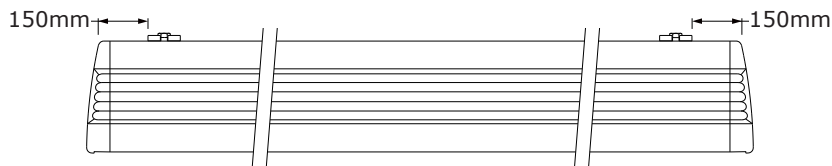


SCAN FOR USER  
INSTRUCTION VIDEO!




### MOUNTING - WALL / VÄGG


- 1** **EN:** Mount the brackets on the wall  
**SE:** Montera konsolerna på väggen

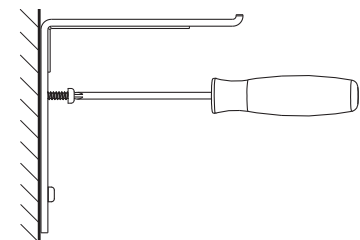

- 2** **EN:** Place the nuts together with the screws in the track  
**SE:** Placera muttrarna tillsammans med skruvarna i spåret

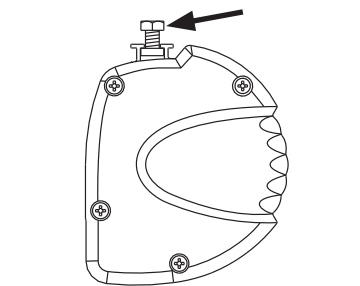


- 3** **EN:** Mount the screen on the brackets and tighten the screws (5Nm).  
**SE:** Montera filmduken på konsolerna och spänn åt skruvarna (5Nm)

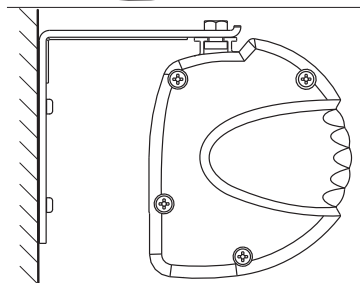


### MOUNTING - CEILING / TAK


- 1** **EN:** Mount the brackets on the ceiling  
**SE:** Montera konsolerna i taket

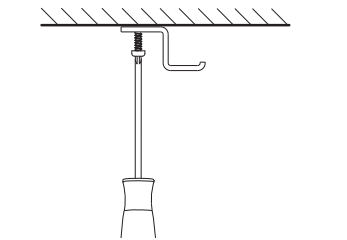

- 2** **EN:** Place the nuts together with the screws in the track  
**SE:** Placera muttrarna tillsammans med skruvarna i spåret

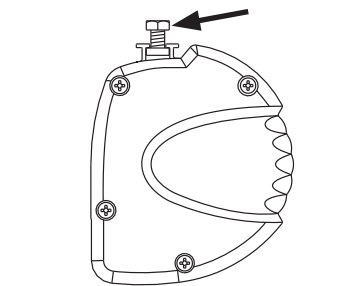

- 3** **EN:** Mount the screen on the brackets and tighten the screws (5Nm).  
**SE:** Montera filmduken på konsolerna och spänn åt skruvarna (5Nm)

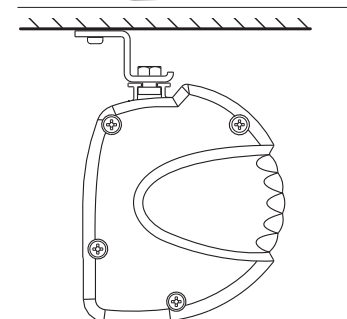

## Please read this...

### User Instructions

1. Never pull the screen down before it has been properly mounted.
2. The product needs to be mounted level for optimized functionality.
3. **To lower the screen surface:** pull the cord to desired position, stop, and let the screen retract slowly until it locks in place.  
**Do not release the screen before it has locked position!**
4. **To retract the screen surface:** use the cord and pull the bottom bar upwards and the screen will pull back into the case smoothly.  
**Do not release the cord until the screen is fully retracted in the case!**  
It may result in the screen pulling up too quickly and cause damage to the screen material and/or the case.
5. Never pull the screen down to far but leave at least one round of screen material on the roll, otherwise it may cause the screen material to detach.
6. Never leave the screen in down position for a longer period, keep it retracted when not used.



Scan for online support and documents  
or visit [support.enyroom.se](https://support.enyroom.se)

euroscreen®

A part of ENYROOM AB  
[www.euroscreens.se](https://www.euroscreens.se)



## Läs detta tack...

### Användarinstruktioner

1. Dra aldrig ner duken innan monteringen är korrekt slutförd.
2. Produkten skall monteras vågrätt för att optimal funktion ska vara säkerställd.
3. **För att dra ner duken:** dra ner till önskat läge och låt sedan duken långsamt gå tillbaka tills mekanismen hittar ett låsläge.  
**Släpp inte duken innan låsläget är nått!**
4. **För att dra upp duken:** använd snöret och lyft bottenlisten uppåt, duken börjar rulla upp. **Släpp inte snöret innan duken är helt upprullad i kassetten!** Detta kan leda till att duken far uppåt okontrollerat och kan orsaka skada på dukmaterialet och eventuell kassett.
5. Dra aldrig ner duken för långt utan låt minst ett varv vara kvar på röret, i annat fall kan dukens infästning skadas.
6. Låt aldrig duken vara i nedfällt läge under en längre tid, låt den vara upprullad om den inte används.



ENYROOM AB

Montörgatan 9, SE-302 62 Halmstad, Sweden  
Tel: +46 35-14 42 90 • [info@enyroom.se](mailto:info@enyroom.se) • [www.enyroom.se](https://www.enyroom.se)